

 
 
TX-325 Users manual

FEATURES:

- Caller ID display for FSK / DTMF incoming calls.
- Menu Language: English / Dutch / French / German.
- Incoming call log: 100 fixed records (consists of 16 characters and 32 digits)
- Phone book: 100 records (consists of 16 characters and 32 digits)
- 16 outgoing call records
- Two way speaker phone
- Tone dialing only
- 12 two-touch memories
- 4 one-touch memories
- LCD contrast adjustment
- Pre-dialing
- Real time clock
- BABY CALL with a maximum length of 16 digits (with on-screen indication)
- Redial / Flash / Pause functions
- Microphone mute with on-screen indication
- In-use / new call indicator
- Digital speaker volume control
- Switchable ringer volume control with High / Low / Off levels
- Ringer indicator
- Telephone line power operation

1. DESCRIPTION

- 1. HANDSET
- 2. HANDSET MICROPHONE
- 3. COIL CORD
- 4. HOOK SWITCH
- 5. HANDSET GUIDE
- 6. LCD
- 7. Ringer LED
- 8. MEMORY (M..)
- 9. DELETE
- 10. MUTE
- 11. VOL (Volume)
- 12. UP
- 13. OK
- 14. PHONE BOOK
- 15. DOWN
- 16. C (Cancel)
- 17. M4
- 18. M3
- 19. M2
- 20. M1
- 21. IN USE / NEW CALL LED
- 22. REDIAL
- 23. PAUSE
- 24. FLASH
- 25. HANDSFREE
- 26. SPEAKER MIC.
- 27. LINE JACK
- 28. HANDSET JACK
- 29. RINGER VOLUME SWITCH

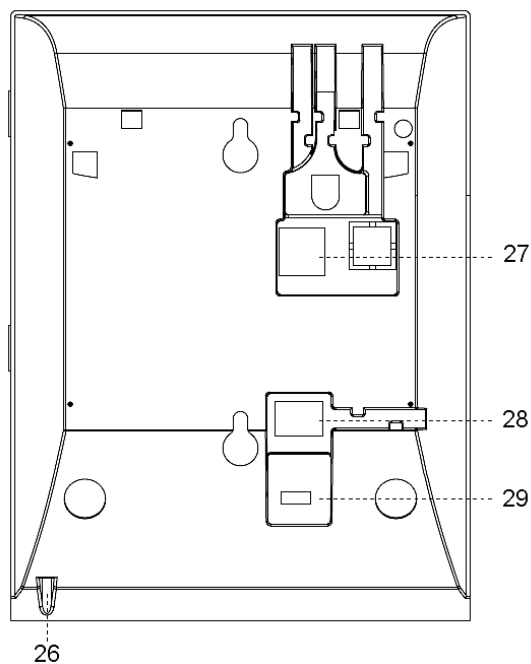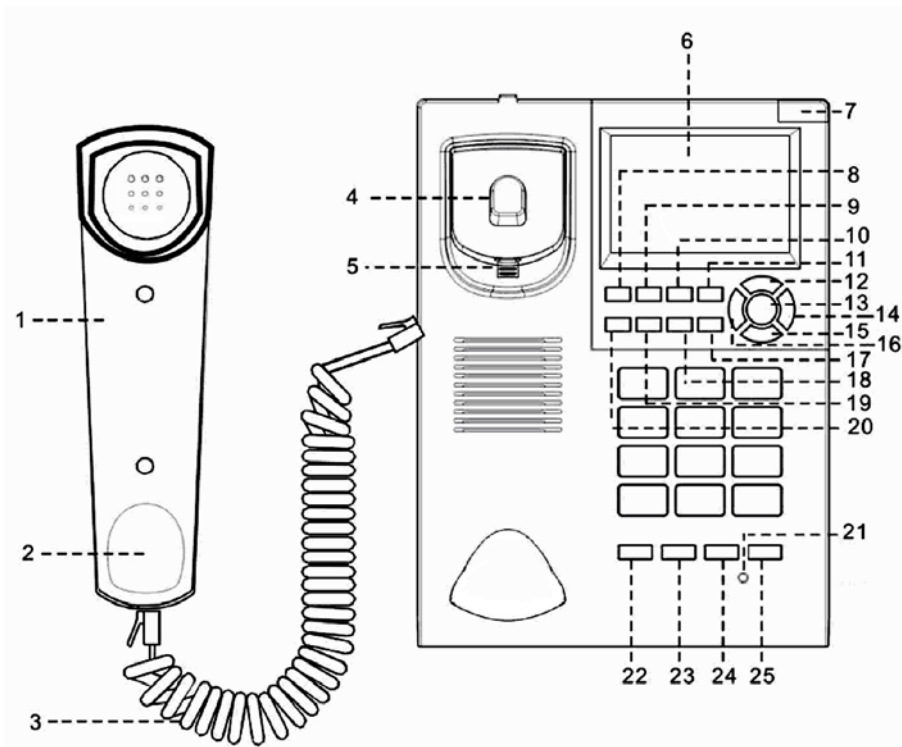

2. INSTALLATION

2.1 Connect one end of handset coil cord to Handset and the other end to Base Unit.

 
2.2 Use the straight Line Cord to connect the Base Unit at socket (13) to Wall Outlet. Care must be taken to ensure that the sockets match the respective plugs. In case your house is not equipped with a compatible wall outlet, you may need an adaptor, or you should consult your distributor/retailer for assistance.

The LCD display will change from low contrast to normal contrast during power charging. And then user can operate the unit with the following steps.

2.3 Desktop


To install base support to the bottom of the base, insert the upper hooks to the base (1), and then push base support forward to the base (2).

To remove base support from the bottom of the base, push the lower side of base support to upward direction (3).

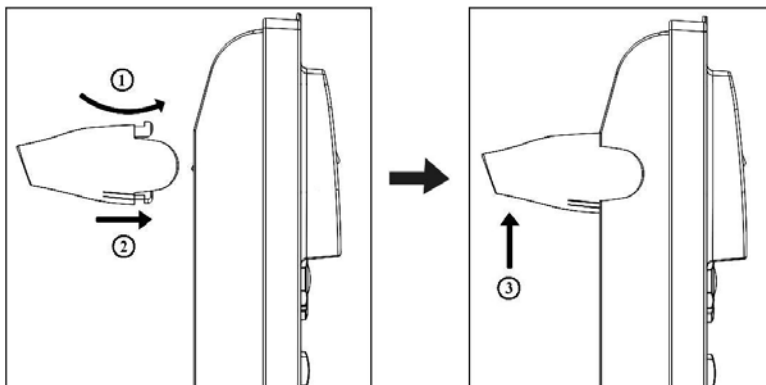

Wall Mount

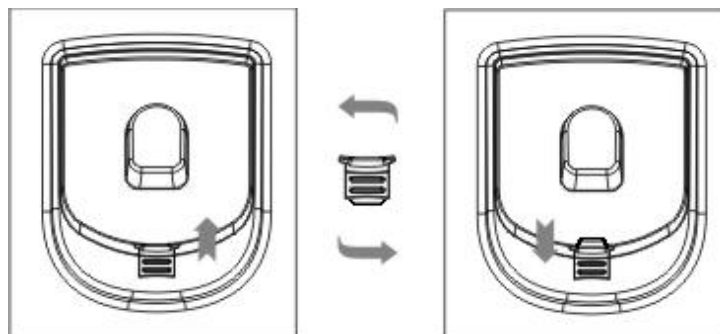 

This telephone set can be mounted on wall. To prevent the Handset from falling, take out the Handset Guide (5), rotate it 180°, and then re-insert in the original place.



3. TELEPHONE OPERATION

3.1 Phone Setting

At the on-hook or off-hook state, press **OK** key into the setting mode, and the LCD will display:

VIEW MENU   Use **UP** or **DOWN** key to select among different items. When you choose one item, press **OK** key again to go into its setting. After you have finished with one item, press **OK** key again to confirm and/or move to another item. To change items, always use **UP** or **DOWN** keys. If you want to quit the setting mode at any time, press **C** key.

The settings of different items are shown in details as follows:

3.1.1 Language

When the LCD displays **SELECT LANGUAGE**, press **OK** key once, LCD will show **Dutch** as default setting. Use **UP** or **DOWN** key to select among the languages of English / Dutch / French / German.

3.1.2 Date/Time

When the LCD displays: **DATE/TIME**, press **OK** key once, the year digits will flash. Use **UP** or **DOWN** key to change the year (Step is 1), then press **OK** key to confirm it and move to the setting of the hour. Repeat the operation to set the minute, day and month by turn. The LCD will automatically display the corresponding day of the week. If it is a FSK format caller ID signal received, the current month, date and time display will be updated (while the year remains unchanged).

3.1.3 LCD Contrast

When the LCD displays: **CONTRAST ADJUST**, press **OK** key and then use **UP** or **DOWN** key

to select among 5 different contrast levels the one that you prefer. The default setting is 3.

3.1.4 Set Flash

When the LCD displays **SET FLASH**, press **OK** key and then use **UP** or **DOWN** key to select the flash time: 100ms, 120ms, 300ms, 600ms. User can press **OK** key to confirm or **C** key to exit.

3.1.5 Input Phone Book record

When the LCD displays: **PHONEBOOK INPUT**, press **OK** key once, then you could input the telephone number. Press **OK** key again to confirm the number and then input the name. Use **C** key to correct. When finished, press **OK** key again to confirm. To exit the operation, press **C** key.

3.1.6 Edit Phone Book record

When the LCD displays: **PHONEBOOK EDIT**, press **OK** key once and input the first character of name, you could view the corresponding telephone numbers by pressing **OK** key. If no character input, press **UP** or **DOWN** key to select the record that you want to edit. The cursor will be flashing on the last digit of the number by pressing **OK** key. Press **C** key to backspace the number and press **OK** key to confirm. Then the cursor will be flashing on the first digit of the name. Press **C** key to backspace, press **OK** key to confirm. To exit the operation, press **C** key.

3.1.7 Babycall

When the LCD displays **BABYCALL**, press **OK** key once and display **BABYCALL OFF**. Use **UP** or **DOWN** key to turn it on and then press **OK** key to confirm. After inputting the BABYCALL number, press **OK** key to confirm. Once BABYCALL is turning on, the LCD will display **BABYCALL ON** in idle display.

3.2 Operation at on-hook state

3.2.1 Receiving incoming FSK & DTMF caller ID

When receiving a phone call, the LCD will display the phone number together with the information of name, date, time, and the number if user had applied for the Caller ID service. A new number will carry a “**NEW**” icon, and a repeated number will carry a “**REP**” icon. A message waiting will carry a ☒ icon. A private call (when the caller prefers his/her number to be hidden) will display “**PRIVATE CALL**”. A call out of service will display “**OUT OF AREA**”. An incorrect incoming signal will display “**NOT AVAILABLE**”. If it is a FSK format caller ID signal, the current month, date and time display will be updated (while the year remains unchanged). If there is no information from exchange, the name shown on the LCD will be same as that in the phone book.


3.2.2 Checking incoming caller ID

User can use **UP** or **DOWN** key to view the information of the incoming calls including phone number, date, and time.

3.2.3 Re-dialing an incoming caller ID

For a local call, just press the **SPEAKER** /  key when the caller's number is on display.


3.2.4 Checking outgoing calls

User can use **REDIAL**/ key to view the outgoing numbers and duration of each call. To re-dial, press **SPEAKER** key or pick-up **HANDSET** directly.

3.2.5 Checking phone book

Press **PHONE BOOK** key and input the first character of name. You could view the corresponding telephone numbers by pressing **PHONE BOOK** key again. If no character input, you could use **PHONE BOOK** key to view in sequence. To re-dial, press **SPEAKER** key directly.

3.2.6 Pre-dialing

Enter a phone number and press **SPEAKER** /  key to dial out. For any input mistakes, press **C** key to correct.





3.2.7 Babycall dialing

Press any key except the **OK** key to dial out the pre-set number when BABY CALL function has been turned on.

3.2.8 C key

1. In the setting mode, use it to correct any input mistakes or quite the setting.
2. In the pre-dialing mode, use it to correct any input mistakes.

3.2.9 Delete / key

1. When scrolling outgoing calls, use it to delete a phone number.
2. When scrolling incoming calls, press  **key** to delete a phone number.
Press and hold  **key** for 4 seconds to delete all incoming call records.
3. When scrolling phone book, press  **key** to delete a phone book record.
Press and hold  **key** for 4 seconds to delete all phone book records.

3.2.10 Phone number store

1. One-touch memory

-- On-hook + pre-dialing number + **OK** + **Mx** (x = 1 ~ 4)

-- On-hook + incoming call + **OK** + **Mx** (x = 1 ~ 4)

-- Dial out: Off-hook + **Mx** (x = 1 ~ 4)

or Press **Mx** (x = 1 ~ 4) first and then off-hook

2. Two-touch memory

-- On-hook + pre-dialing number + **OK** + **N** (N = 1 ~ 9, 0, *, #)

-- On-hook + incoming call + **OK** + **N** (N = 1 ~ 9, 0, *, #)

-- Dial out: on-hook + **M..** + **N** (N = 1 ~ 9, 0, *, #)

3. Phone Book memory

Incoming call + **OK** + **PHONE BOOK** + edit of phone book + **OK**

3.2.11 Ringer volume control


Ringer volume can be adjusted to 3 different levels of **OFF / L / H** by the slide switch at the bottom.

3.2.12 Ring Indicator (Ringer LED)


The ring indicator will be blinking when there is an incoming call.

3.3 Operation at the off-hook state

3.3.1 Checking incoming and outgoing calls

You can use **UP** or **DOWN** key to view the information of the incoming calls including phone number, date and time. Press **REDIAL** /  key to check outgoing call record with call duration.

3.3.2 Dialing for display mode

During the number shown on LCD such as incoming call, outgoing call and phone book memory, press **SPEAKER** /  key or pick up handset to dialing out the number.

3.3.3 Dialing Two-touch memory

Picks up the handset or press **SPEAKER** key and press **M..** key and **N** (N = 1 ~ 9, 0, * or #).

3.3.4 Call Time

The display shows the duration of a call in progress since a number has been dialed out. Manual control is not available.

3.3.5 Pause key

Press **PAUSE** key to insert a delay time of 3.6 seconds in a dialing sequence.

3.3.6 Mute key

During phone conversation, if you do not want the person on the line to hear your voice, press **MUTE** key to cut off the microphone and **MUTE ON** will be prompted. To resume conversation, press **MUTE** key again and **MUTE OFF** will be prompted.

3.3.7 FLASH key

During off-hook state, press **FLASH** key for recall that is used for some PSTN network and PBX services.

3.3.8 REDIAL key


When the phone is off-hook, press **REDIAL**/ key to dial out the phone number which was dialed out by user at the latest time.

3.3.9 In use / New call LED

The in use LED should be turned on during the phone is off-hook. The LED will be blinking while there is a miss call. It will be turned off until viewing all miss calls in incoming call log.

3.4 Two-way speaker phone operation

3.4.1 Speaker mode

To make a call, press **SPEAKER** key to activate the speaker phone. Press **SPEAKER** /  key

to deactivate the speaker phone when the call is over.

3.4.2 Speaker volume control

To change the speaker volume, press **VOL** key to adjust the volume levels during off-hook state.